


Remote control instructions

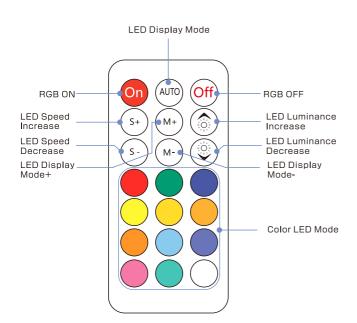

RGB Controller



- I Fan 1~10:6Pin Port (Connect Sequence from 1~10)
- 2 Power:4Pin Molex Power Connector(To PSU)



CAUTION:

Do not plug the power supply line on the control box into the wrong excuse, otherwise the lamp beads will be burned.